



**Patentierter Anbausatz
für SRD991/SRI990
Stellungsregler.**



Patentierter Anbausatz für Regelventile

Beschreibung

Das Design des neuen Anbausatzes für Regelventile bietet eine sehr hohe Genauigkeit für anspruchsvolle Regelanwendungen. Der patentierte Hubabgriff kombiniert höchste Genauigkeit mit extremer Langlebigkeit.

Kompakte Ausführung



Die kleine und langlebige Kombination von RCV Regelventil, RCV Stellungsregler und des neuen patentierten Anbausatzes gewährleistet den höchsten Leistungsstandard für die anspruchsvollsten Anwendungen.

Höhere Genauigkeit

Die selbstjustierende, gefederte, abgeschrägte Führung gewährt konstanten Kontakt bei geringstmöglicher Reibung des Systems. Der doppelte, drehbare Kontakt der Rollenführung verhindert einseitigen Verschleiß an den Kontaktstellen.

Keine Querkraft

Die schwimmende Konstruktion verhindert die Entstehung von Querkraften auf die Ventilschneidkante. Dies ist insbesondere bei kleinen Kv-Werten ein erheblicher Vorteil. Die Lebensdauer der Innengarnitur wird hierdurch erheblich verlängert.

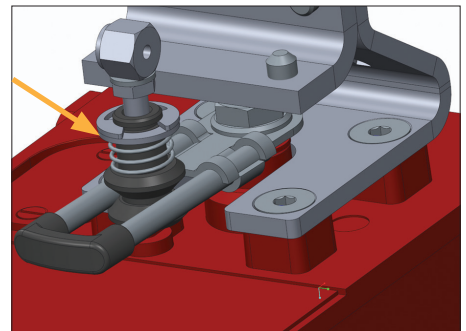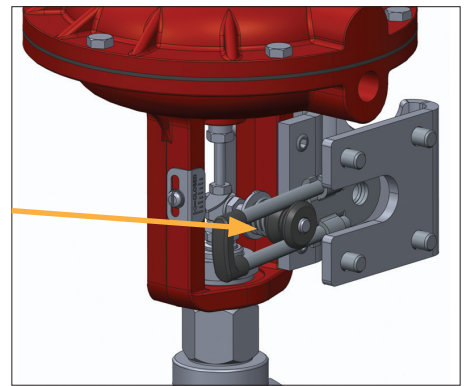

Patent Pending: Application Number—14097989

Control. Manage. Optimize.

Trademarks appearing in this document are the property of their respective entities. Due to continuous research, product improvements and enhancements, Badger Meter reserves the right to change product or system specifications without notice, except to the extent an outstanding contractual obligation exists. © 2014 Badger Meter, Inc. All rights reserved.

www.badgermeter.com

The Americas | Badger Meter | 4545 West Brown Deer Rd | PO Box 245036 | Milwaukee, WI 53224-9536 | 800-876-3837 | 414-355-0400
México | Badger Meter de las Americas, S.A. de C.V. | Pedro Luis Ogazón N°32 | Esq. Angelina N°24 | Colonia Guadalupe Inn | CP 01050 | México, DF | México | +52-55-5662-0882
Europe, Middle East and Africa | Badger Meter Europa GmbH | Nurtlinger Str 76 | 72639 Neuffen | Germany | +49-7025-9208-0
Europe, Middle East Branch Office | Badger Meter Europe | PO Box 341442 | Dubai Silicon Oasis, Head Quarter Building, Wing C, Office #C209 | Dubai / UAE | +971-4-371 2503
Czech Republic | Badger Meter Czech Republic s.r.o. | Mařikova 2082/26 | 621 00 Brno, Czech Republic | +420-5-41420411
Slovakia | Badger Meter Slovakia s.r.o. | Racianska 109/B | 831 02 Bratislava, Slovakia | +421-2-44 63 83 01
Asia Pacific | Badger Meter | 80 Marine Parade Rd | 21-04 Parkway Parade | Singapore 449269 | +65-63464836
China | Badger Meter | 7-1202 | 99 Hangzhong Road | Minhang District | Shanghai | China 201101 | +86-21-5763 5412